FAN COIL SEQUENCE OF OPERATION (HEATING ONLY)

- 1. FAN COIL UNIT SHALL OPERATE ON A SCHEDULE AS SET BY THE DCC.
- MODULATE V-1 TO MAINTAIN SPACE SET POINT AND FAN SHALL CYCLE W/TEMPERATURE.
 ALARM IF SPACE TEMPERATURE OUTSIDE OF RANGES.
- J. ALARM IF SPACE IEMIFERATURE OUTSIDE OF RANGE

