

# PIPING SYMBOLS

———— FWPD ————	FEEDWATER PUMP DISCHARGE
———— FWPS ————	FEEDWATER PUMP SUCTION
———— CTPD ————	CONDENSATE TRANSFER PUMP DISCHARGE
———— CTPS ————	CONDENSATE TRANSFER PUMP SUCTION
———— VR ————	VACUUM CONDENSATE RETURN
———— TC ————	TUBE CLEANER WATER SUPPLY
———— BO ————	BOILER BLOWOFF
———— CBD ————	CONTINUOUS BLOWDOWN
———— BWS ————	BOILER WATER SAMPLE
———— FWS ————	FEEDWATER SAMPLE (FROM DEAERATOR)
———— CF ————	CHEMICAL FEED
———— OFL ————	OVERFLOW
———— A ————	COMPRESSED AIR
———— G ————	NATURAL GAS MAIN FUEL
———— G(I) ————	NATURAL GAS IGNITER FUEL
———— LPG(I) ————	LIQUEFIED PETROLEUM GAS IGNITER FUEL
———— FOS ————	FUEL OIL SUPPLY
———— FOR ————	FUEL OIL RETURN
———— CW ————	COLD WATER (CITY WATER)
———— SW ————	SOFTENED WATER
———— HW ————	HOT WATER
———— RH ————	ROLLER-TYPE HANGER
———— SH ————	VARIABLE SPRING-TYPE HANGER (TYPE 51)*
———— SCH ————	SPRING CUSHION-TYPE HANGER (TYPE 48 OR 49)*
———— ■ ————	CLEVIS-TYPE HANGER
———— TH ————	TRAPEZE HANGER (PROVIDE U-BOLT PIPE ATTACHMENT TO TRAPEZE EXCEPT WHERE RH ARE INDICATED)
———— PS ————	FLOOR-SUPPORTED PIPE STAND
———— RC ————	RISER CLAMP (TYPE 42)*
———— ○ ————	
———— WB ————	WALL BRACKET (TYPE 31, 32, 33)*
———— ■ ————	
———— CSH ————	CONSTANT SUPPORT HANGER (TYPE 54, 55, 56)*
———— ■ ————	
———— SS ————	SLIDING SUPPORTS (TYPE 35)*

\* TYPE NUMBERS REFER TO MANUFACTURER'S STANDARDIZATION SOCIETY STANDARD PRACTICE SP-58



Department of  
Veterans Affairs

DETAIL TITLE: PIPING SYMBOLS

SCALE :NONE

DATE ISSUED: 11/01/2017

CAD DETAIL NO.: SD230511-15.DWG