



NOTES:

1. DEAREATOR OVERFLOW ONLY PERMITTED TO GO TO CONDENSATE TANK IF THE CONDENSATE TANK IS A ASME CODE TANK WITH SAME MAWP AS THE DEAREATOR.
2. FOR COMPLETE PIPING SEE REFERENCED DETAILS.

BASIC FLOW DIAGRAM - CONDENSATE AND BOILER FEEDWATER
NTS