


DESIGNER'S NOTE:

USE THIS DETAIL WHEN THE CONVECTOR (OR STEAM RADIATOR) IS USED IN CONJUNCTION WITH AN AIR TERMINAL UNIT TO SERVE AN OCCUPIED SPACE, REPLACE RADIATOR VALVE WITH A STEAM CONTROL VALVE AND CONTROL SPACE WITH COMMON THERMOSTAT.

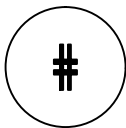

CONVECTOR-STEAM PIPING CONNECTION

NTS



Department of
Veterans Affairs

DETAIL TITLE: CONVECTOR-STEAM PIPING CONNECTION

SCALE :NONE

DATE ISSUED: 11/01/2017

CAD DETAIL NO.: SD238200-08.DWG