
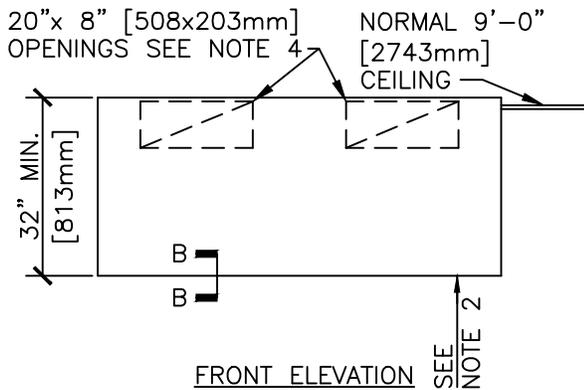


RECESSED STERILIZERS IN MECHANICAL EQUIP AREA

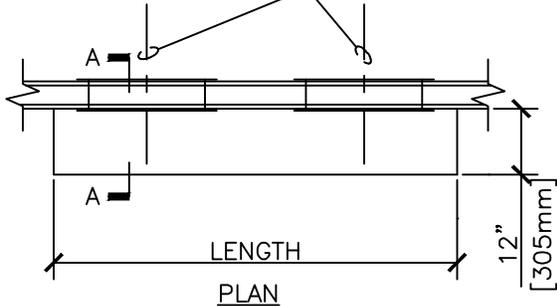


SUPPORT ANGLES OR STANDING SEAMS. SECURE TO STRUCTURE ABOVE AS RECOMMENDED BY SMACNA

NORMAL 9'-0" [2743mm] CEILING

PROVIDE A STAINLESS STEEL COLLAR FOR EACH OPENING

PARTITION


STAINLESS STEEL SCREWS 16" [406mm] O.C.

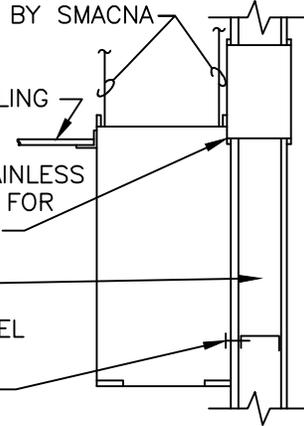

SECTION A

CONTINUOUS WELD OR SOLDER


1"x1/8" [25x3mm] STIFFENING BAR, SEE NOTE 3

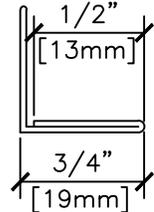

SECTION B

NOTE:

1. HOODS SHALL BE STAINLESS STEEL. SEE SPECIFICATIONS. FOR HOOD SIZES & LOCATIONS SEE EQUIPMENT SCHEDULE OR FLOOR PLANS.
2. HOODS SHALL BE 6'-6" [1981mm] ABOVE FINISHED FLOOR.
3. HOODS OVER 6'-0" [1828mm] LONG WITH 2 OR MORE SECTIONS SHALL HAVE INSIDE STANDING SEAM AND 1"x1/8" [25x3mm] STIFFENING BAR. SEE SECTION B.
4. PROVIDE A 20"x 8" [508x203mm] OPENING OVER EACH STERILIZER. LOCATE OPENING AS HIGH AS POSSIBLE IN HOOD, BUT BELOW CEILING IN MECHANICAL EQUIPMENT AREA IF ROOM HAS A CEILING.



HOOD TYPE "B"

NTS



U.S. Department of Veterans Affairs

DETAIL/TITLE: HOOD TYPE "B"

SCALE: NONE

DATE ISSUED: FEBRUARY 2017

CADD DETAIL NO. : SD233100-20